




How to Measure: Roller Shades/ Zebra Roller Shades / Blackout Roller Shades

Use a metal tape measurement to measure your windows. Please take measurements round down to 1/8" increments.

Inside Mount

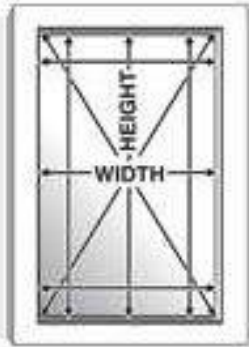

Width: Measure the exact width of the window opening at the top, where the brackets will be mounted. Be precise and round to the nearest 1/8th of an inch. The workroom will deduct 1/8" (from the tip-to-tip size) to allow for clearance. For roller shades, there is a 1/2" gap on each side and for clutch roller shades there is a 5/8" gap on each side. To avoid these light gaps, consider an Outside Mount.

Outside Mount



Width: Measure width at the top of the window where the brackets will be placed. Measure the actual height of the window. The workroom will add fabric for roll-up allowance. For Outside Mount, take needed overlaps on each side to cover the window frame and 1 1/2 inch side to have proper light control. A 1-1/2" to 2" overlap on each side is recommended to stop light gaps.

Height: Measure the actual height of the window. The workroom will add fabric for roll up allowance.